

EN

Product Warning & Instructions

Important: Instructions must be read before use by all users of the product.

Camping is generally very safe but when using our products we ask you to adhere to the following to ensure safety and avoid damaging your tent.

WARNING:

- Check your tent, pegs and any associated cordage is in good condition each time before use.
- Check for & avoid sharp items that could come into contact with the tent or cordage.
- Take care when walking past guy-lines. Trips could cause damage to the tent or injury.
- Always keep your tent a safe distance from flames or direct heat sources - do not cook inside the tent.

TIPS:

Setting up your tent tautly will avoid any excess movement from wind. Peg out the tent loosely at first, before moving round the tent and tightening the peg loops, trying to create equal tension on all sides.

PRODUCT CARE:

- Always hang damp product(s) after use & dry naturally.
- Store in a cool, dry, dark place.
- When packing: use different fold lines after packing 10 times, or stuff into sack.
- Use in extreme temperatures (above 40 °C and below -15 °C) is not recommended.
- Prolonged exposure to strong UV light can cause the material to weaken (UV degradation is excluded from warranty).
- Avoid using ridge-line or guy-line cord that is abrasive or rough as this can damage the attachment loops.
- Damage caused from trips or falls over guy-lines or ridge-lines is not covered by warranty

WASHING:

By hand only in warm (not hot) water. Do not machine wash. Do not tumble dry.

DD Hammocks products are not suitable for children under 3.

DK

Product Warning & Instructions

Important: Instructions must be read before use by all users of the product.

Camping is generally very safe but when using our products we ask you to adhere to the following to ensure safety and avoid damaging your tent.

WARNING:

- Check your tent, pegs and any associated cordage is in good condition each time before use.
- Check for & avoid sharp items that could come into contact with the tent or cordage.
- Take care when walking past guy-lines. Trips could cause damage to the tent or injury.
- Always keep your tent a safe distance from flames or direct heat sources - do not cook inside the tent.

TIPS:

Setting up your tent tautly will avoid any excess movement from wind. Peg out the tent loosely at first, before moving round the tent and tightening the peg loops, trying to create equal tension on all sides.

PRODUCT CARE:

- Always hang damp product(s) after use & dry naturally.
- Store in a cool, dry, dark place.
- When packing: use different fold lines after packing 10 times, or stuff into sack.
- Use in extreme temperatures (above 40 °C and below -15 °C) is not recommended.
- Prolonged exposure to strong UV light can cause the material to weaken (UV degradation is excluded from warranty).
- Avoid using ridge-line or guy-line cord that is abrasive or rough as this can damage the attachment loops.
- Damage caused from trips or falls over guy-lines or ridge-lines is not covered by warranty

WASHING:

By hand only in warm (not hot) water. Do not machine wash. Do not tumble dry.

DD Hammocks products are not suitable for children under 3.