

EN



## Product Warning & Instructions

**Important: Instructions must be read before use by all users of the product.**

**Camping is generally very safe but when using our products we ask you to adhere to the following to ensure safety and avoid damaging your equipment.**

### **WARNING:**

- Check equipment is in good condition each time before use.
- Check for & avoid sharp items that could come into contact with the equipment.
- Do not overload the rucksack so much that balance is adversely affected or movement becomes difficult.
- Children should be supervised when using this product.
- Always keep your equipment a safe distance from flames or direct heat sources

### **PRODUCT CARE:**

- Always hang damp product(s) after use & dry naturally.
- Store in a cool, dry, dark place.
- Use in extreme temperatures (above 40 °C and below -15 °C) is not recommended.
- Prolonged exposure to strong UV light can cause the material to weaken (UV degradation is excluded from warranty).

### **WASHING:**

By hand only in warm (not hot) water. Do not machine wash. Do not tumble dry.

**DD Hammocks products are not suitable for children under 3.**